

# Serene S2078

Serene Wall Mounted Fan Heater



## Specification & Operating Instructions

## Introduction

Designed for easy installation, your Serene S2078 Wall Mounted Fan Heater includes a clip- on wall mount bracket designed for faster and easier installation.

## Important Safety Information

- When using any electrical appliance, safety precautions should always be observed. Read these instructions carefully, and retain for future reference. For service, contact your nearest authorised service agent.
- Under no circumstances should an unauthorized person open the heater to adjust the thermostat.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance. Do NOT use this appliance other than for its intended use.
- Use this appliance only with the voltage specified on the rating label.
- Be very careful not to touch hot surfaces or moving parts.
- Do NOT cover the grilles or place any object or material up against the unit as this may block the entry or exhaust of airflow.
- Do NOT probe any opening to remove fluff. To ensure trouble-free performance, it is recommended that the unit be isolated from the power supply and a vacuum cleaner used to remove dust and fluff from the inlet and outlet grilles on a regular basis.
- If Hard Wiring Installation, this must be performed by a licensed electrician. Regulations require that electrical work be carried out only by properly qualified person. For your own safety and that of others, ensure this is done.
- Do NOT allow the supply cord to come into contact with heated surfaces during operation.
- If the supply cord becomes damaged, it must be replaced by a qualified Electrician in order to avoid a hazard.

## Installation

Ensure the appliance is unplugged prior to installation


This appliance MUST be installed in accordance with relevant wiring rules and regulations which cover installation of appliances and accessories in damp situations, such as bathrooms, showers, laundries and other areas, fixed water containers (in Australia and New Zealand - AS/NZS 3000:2000 Wiring Rules

### Distances

The heater must be mounted a minimum distance of:

- 1800mm from floor level
- 200mm below the ceiling
- 250mm from adjacent walls
- 500mm between the heater and any objects heated below it

**Important:** The heater must NOT be located immediately below a socket outlet or within reach of a bath or shower.

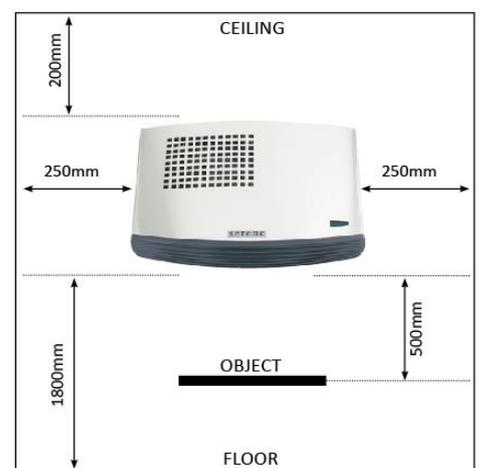

## To attach the heater to the wall

- Remove the wall mounting base from the heater by using a screwdriver (large flat blade) to release both of the side clips from inside the base.
- Secure the mounting base to the wall using the four fixing screw holes provided. The base supplied with the heater must be used when attaching the heater to the wall.
- Put the heater onto the mounting base and snap it into position.
- Insert the plug in to the mains power supply. A suitable disconnect device is required to be incorporated in the fixed supply wiring.

## Operation

The operation of the heater is controlled by use of the pull-cord switch. Pull the pull-cord to switch the heater on. Pull the pull-cord again to switch the heater off. The red LED indicator lights when the heater is operating.

The heat output is regulated by an internal step-down thermostat, which will reduce the output from 2000-2400 Watts to 1000-1200 Watts, when a comfortable room temperature is reached.

## Care

The heater requires regular cleaning to ensure trouble free operation.

- Isolate the heater from the mains power supply.
- Use a damp cloth to clean the exterior of the heater. Do not use any abrasive cleaners.
- Use a vacuum cleaner to remove dust and fluff visible on the heater inlet and outlet grilles.
- Ensure the heater is dry before turning the mains power supply to the heater back on.

## Specifications: Serene S2078

Electrical Supply	220-240 volts A.C. 50 Hz
Wattage	2000-2400W, thermostatically reduced to 1000-1200W
Wiring	Permanent connection. Double insulated, no earth required.
Ingress Protection Rating	IP20

## Dimensions

Height	220mm
Width	375mm
Depth	140mm (includes mounting base)
Weight	2.35kg

Serene Industries Limited reserves the right to alter specifications without notice.

## Contact

### HONG KONG

t: +852 2325 3210

f: +852 2325 3166

e: [info@serene-ind.com](mailto:info@serene-ind.com)

w: [www.serene-ind.com](http://www.serene-ind.com)

Suite 1010, 15F, Block A, Alexander Industrial Building,  
62, King Lam Street Cheung Sha Wan, Kowloon Hong Kong

### NEW ZEALAND

t: +64 (3) 344 5550

ff: 0800 437 264

e: [nzenquiry@serene-ind.com](mailto:nzenquiry@serene-ind.com)

w: [www.serene-ind.com](http://www.serene-ind.com)

PO BOX 33501, Barrington, Christchurch 8024

### AUSTRALIA

e: [auenquiry@serene-ind.com](mailto:auenquiry@serene-ind.com)

w: [www.serene-ind.com](http://www.serene-ind.com)

### UNITED KINGDOM

t: +44 (0)1624 497794

e: [ukenquiry@serene-ind.com](mailto:ukenquiry@serene-ind.com)

w: [www.serene-ind.com](http://www.serene-ind.com)

Rowhead House, Far Common Road  
Mirfield, West Yorkshire WF140DQ