

EUROMATIC



40cm Box Fan

INSTRUCTION MANUAL

Model Number KYT40-5

AFTER SALES SUPPORT

(AU) 1300 886 649 (NZ) 0800 836 761



Important Safety Instructions

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. If you sell or transfer ownership of this product, pass on these instructions to the new owner.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Electrical safety and cord handling

- **Voltage:** Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating label. If this is not the case, do not use the fan.
- **Water:** To protect against the risk of fire and electric shock, do not immerse the cord, plug or the fan itself in water or other liquid, or expose the electrical connections to water. Ensure your hands are dry before handling the plug or switching on the appliance. Do not use the fan outdoors or on wet surfaces. Protect it from liquid spills. Do not use it in a bathroom or laundry, or where it can be splashed with water.
- **Damage:** Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the manufacturer, its authorised service centres or appropriately qualified personnel in order to avoid any hazards.

WARNING! Do not pick up or operate the appliance if the power supply cord, plug or housing is damaged, or after it malfunctions or has been dropped or damaged in any manner. In case of damage, contact our after sales support centre.

Protect the power cord: Do not kink or damage the cord; do not place it near a heat source. Do not pull or carry the appliance by the cord or use the cord as a handle, close a door on the cord or pull it around sharp edges or corners. Always unwind the cord completely to avoid overheating. Run the cord in such a way so that no one will trip over it.


- **WARNING! No extension cord, no timer:** Do not use this fan with an extension cord, plug adaptor, external timer, programmer or separate speed control device.
- **Connection:** To insert the plug, grasp it firmly and guide it into outlet.
- **Disconnection:** Switch off and unplug the appliance when it is not in use and before cleaning, servicing, moving or storing the appliance. Grasp the plug and remove it from the outlet, do not pull the cord when disconnecting.
- **RCD:** The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

Important Safety Instructions (Cont.)

Usage conditions and restrictions

- **Domestic use only:** This appliance is intended for indoor household use only. It is not suitable for commercial, industrial or outdoor use. Do not use it for anything other than its intended purpose, and only use it as described in this manual. Any other use may cause fire, electric shock or injury.
- **Not a dryer:** Do not use this fan as a dryer.
- **Common sense:** These instructions are not intended to cover every possible condition and situation. As with any electrical appliance, common sense and caution are therefore always recommended when installing, operating and maintaining the unit.
- **Attachments:** The use of accessory attachments not recommended in this manual may cause injury or hazards.
- **Misuse:** We accept no responsibility for any damages or personal injury caused by misuse of the product and/or failure to follow these instructions.
- **Usage restriction:** This fan is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children:** Supervise children to ensure they do not play with the fan. Close supervision is necessary when any appliance is used by or near children.
- **Unattended:** Do not leave the appliance unattended while it is operating.
- **Location:** Place the fan on a dry, flat, stable surface to avoid overturning.
- **Proper assembly:** Do not operate the fan until fully assembled with all parts. Do not use the appliance without the protective grille. Do not attempt to force the grille in order to stop or start the fan.
- **Upright position:** Place the unit on a flat surface to reduce the risk of it tipping over. Do not tilt the unit, always keep it upright.
- **WARNING! DO NOT use the fan in the following areas/circumstances:**
 - * Near an open flame or near other sources of high heat.
 - * Near an open window where rain may enter the product.
 - * On a soft surface (such as carpet) or where it may tip over during use.
 - * Outdoors or in areas of high humidity (e.g. in a bathroom), without ventilation.
 - * In areas where paint, petrol, etc. is stored and there is a risk of explosion or fire from flammable gases.
- **CAUTION! Personal safety:** Avoid contact with moving parts. Never insert fingers, pencils or any other objects through the grilles when the fan is connected to power, and make sure to warn children of the dangers.
- **Do not cover** the fan and ensure nothing is blocking the air outlet and intake.
- **After use:** Unplug the unit from the outlet when not in use or before cleaning. Allow to cool before putting on or taking off any parts.

Product Overview

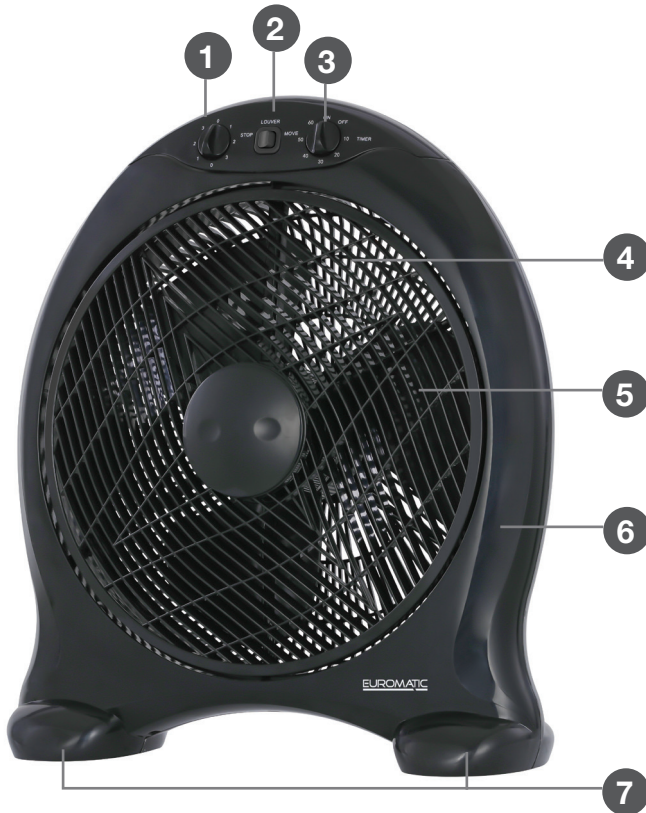

Parts list

- 1 Speed control
- 2 Louvre rotation switch
- 3 60 minute timer
- 4 Front safety grille (guard)
- 5 Blade
- 6 Housing
- 7 Stand feet (x2)

Also supplied, but not pictured:

Instruction manual
Warranty certificate

NOTE: Due to continued product improvement, images and illustrations in this manual may vary slightly from the product purchased. All images in this manual are for reference purposes only. Parts are not necessarily pictured to scale.

Getting Started

Unpacking

- This product has been packaged to protect it against transportation damage. Unpack the appliance and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event that the packaging materials are to be disposed of, please recycle them where possible.
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- Unwind the cord to its full length and inspect it for damage. Do not use the appliance if the appliance or its cord have been damaged or are not working properly. In case of damage, contact our after sales support centre for advice on examination, repair or return of the damaged product.
- Make sure you have read and understood all instructions and warnings in this manual. Refer to the Product Overview, opposite, to familiarise yourself with the product and identify all parts. Pay particular attention to the safety instructions on the previous pages.
- No assembly is necessary; the fan comes fully assembled.

Instructions

Rotating grille

The rotating grille at the front of the box fan maximises the cooling efficiency and moves air around the room.

- Press the louvre rotation switch (LOUVER) on the front panel to the MOVE position for the grille to start rotating.
- When you want the airflow in one direction only, wait until the fan is blowing in the desired direction before stopping the grille movement.



Three-speed operation

The box fan is designed to work in three different speed modes, ranging from a gentle breeze (1) to full speed (3).

- To start/stop the fan and select a rotating speed, turn the speed control (pictured right) clockwise or anticlockwise:
 - Speed 0 - Stop/Off
 - Speed 1 - Low Speed
 - Speed 2 - Medium Speed
 - Speed 3 - High Speed



NOTE: When the timer is set to OFF, the fan will not operate. To use the fan without the timer, you must turn the timer knob to ON before adjusting the rotating speed.

Timer

The fan has a timer you can use to set the amount of time (up to 60 minutes) after which the fan will switch off automatically.

- To operate the timer, turn the timer knob clockwise to the desired position.
- After the set time, when the timer reaches the OFF position, the fan switches off. To operate the fan again at this stage, reset the timer to the desired length of time you want it to run for, or use the fan without the timer (see the note below).



NOTE: To use the fan without the timer, turn the timer knob to ON, then turn the speed control to select the desired fan speed and finally select MOVE or STOP for the rotating grille.

Care and Maintenance

WARNING!

- Before cleaning, maintenance or moving the fan, switch off the fan and unplug it from the wall outlet.
- Do not immerse the fan in water or other liquids. Do not spray it with liquids. Do not allow water to drip on or into the fan motor housing.
- Never use petrol, solvents, harsh detergents, or abrasive or alkaline cleaners on the fan.

Cleaning the fan

Press the louvre rotation switch (LOUVER) on the front panel to the STOP position. Turn the speed control to the 0 position and unplug the fan.

Use only a soft, damp cloth to gently wipe the fan and dry well. Ensure the cloth is not too wet and no moisture enters the housing. Alternatively, use a vacuum cleaner soft brush attachment to remove dust from around the air intake and air outlet grilles. Do NOT remove a safety grille for cleaning.

Storage

At the end of the season, clean the fan as described above, then store the appliance in a cool and dry place, out of reach of children. We recommend storing the appliance in its original carton to protect it from dust. Alternatively, place a plastic bag or piece of material over the appliance for dust protection.

Service and repair

The appliance requires little maintenance and contains no user-serviceable parts inside. Do not attempt to take it apart, repair or modify it. It is not designed to be dismantled without special tools. Do not operate the fan if its power cord or plug is damaged, or when it is working abnormally. In case of damage or malfunction, or if the cord is damaged, have the unit repaired by trained personnel only, or contact our after sales support centre for advice.

Technical specifications: Model KYT40-5

Wattage	45W
Voltage	220-240V ~
Frequency	50Hz



CLASS II - DOUBLE INSULATED APPLIANCE

This symbol indicates that the appliance has been designed in such a way that it does not require a safety connection to electrical earth (ground).

Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on (AU) 1300 886 649 or (NZ) 0800 836 761 for advice.

Distributed by Tempo (Aust) Pty Ltd ABN 70 106 100 252

PO BOX 6056 Frenchs Forest, Australia NSW 2086

Customer Helpline:

(AU) 1300 886 649 (NZ) 0800 836 761

Email: info@tempo.org

For an electronic version of this manual, please contact our after sales support centre.