

EUROMATIC



117cm Tower Fan with Remote Control

INSTRUCTION MANUAL

Model Number TF4603TR-S

AFTER SALES SUPPORT
(AU) 1300 886 649 (NZ) 0800 836 761



Contents

Important Safety Instructions	3
Product Overview	5
Getting Started	7
Instructions	9
Frequently Asked Questions	11
Other Useful Information	12

Important Safety Instructions

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. Keep the manual in a safe place for future reference, along with any warranty information, your purchase receipt and the original packaging. **Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:**

- **Voltage:** Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating label.
- **Water:** To protect against fire and electric shock, do not immerse the cord, plug or fan in water or other liquid, or expose the electrical connections to water. Ensure your hands are dry before handling the plug or switching on the fan. Do not use the fan outdoors or on wet surfaces. Protect it from liquid spills.
- **Damage:** Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the manufacturer, its authorised service centres or appropriately qualified personnel in order to avoid any hazards. **WARNING!** Do not pick up or operate the fan if the supply cord, plug or housing is damaged, or after it malfunctions or has been dropped or damaged in any manner. If damaged, contact our after sales support centre for advice.
- **Protect the power cord:**
 - Do not operate the fan with the cord coiled up; always fully unwind.
 - Do not twist or kink the cord or let it touch heated surfaces.
 - Do not put any stress on the cord where it connects to the product.
 - Never carry the fan by the cord.
 - Arrange the cord away from any traffic area so no one will trip over it.
 - Do not run the cord under carpeting or cover it with rugs or runners.
- **WARNING! No extension cord, no timer:** Do not use this fan with an extension cord, plug adaptor, external timer or separate speed control device.
- **Connection:** To insert the plug, grasp it firmly and guide it into a separate electrical outlet. Do not use more than one electrical appliance at the same time on the same outlet.
- **Disconnection:** Do not use the main power switch and the On/Off switch as the sole means for disconnecting power. Always unplug the fan from the power outlet when it is not in use and before cleaning, servicing, moving or storing the appliance. Grasp the plug and remove it from the outlet, do not pull the cord when disconnecting at the mains.
- **Attachments:** The use of accessory attachments not recommended in this manual may cause injury or hazards.

Important Safety Instructions (Cont.)

- **RCD:** Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.
- **Domestic use only:** This appliance is intended for indoor household use only. It is not suitable for commercial, industrial or outdoor use. Do not use it for anything other than its intended purpose, such as for drying clothes. Only use it as described in this manual. Any other use may cause fire, electric shock or injury.
- **Misuse:** We accept no liability for any damages or personal injury caused by misuse of the product and/or failure to follow these instructions.
- **Usage restriction:** This fan is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children:** This fan is not a toy. Supervise children to ensure they do not play with it. Close supervision is necessary when any appliance is used by or near children.
- **WARNING! Do not leave unattended during use!** Always switch it off and unplug when not in use, if left unattended and before cleaning and storing.
- **Location:** Place the fan on a dry, flat, stable surface to avoid overturning.
- **Keep the top clear:** Do not place anything on top of fan.
- **Proper assembly:** Do not operate the fan until fully assembled with all parts.
- **WARNING! DO NOT use the fan in the following areas:**
 - * near an open flame, a hot burner, oven or other source of high heat
 - * on a soft surface (such as carpet) or where it may tip over during use
 - * outdoors or in areas of high humidity without suitable ventilation (such as in a bathroom, laundry area, near a sink, washer, pool or any source of water)
 - * near curtains or in tight corners, to enjoy maximum airflow
 - * in areas where paint, petrol, etc. is stored and there is a risk of explosion or fire from flammable gases, or in areas where substances are being sprayed.
- **CAUTION! Personal safety:** Avoid contact with moving parts. Never insert fingers, pencils or any other objects through the grilles/housing when the fan is running. Keep hair and loose clothing well away from the fan when it is in use.
- **Free airflow:** Ensure nothing is blocking the air outlet and intake. Do not insert foreign objects into any opening as this may cause electric shock and/or a fire hazard.

Product Overview

Front view

Control panel



Tower fan

- 1 Control panel
(see page 6 for details)
- 2 Display panel
- 3 Air outlet
- 4 Remote control
(see page 6 for details)
- 5 Base stand (to be assembled)

NOTE:

 
Due to continued product improvement, images and illustrations in this manual may vary slightly from the product purchased. All images in this manual are for reference purposes only. Parts are not necessarily pictured to scale.

Product Overview (Cont.)

Control and display panels



Remote control

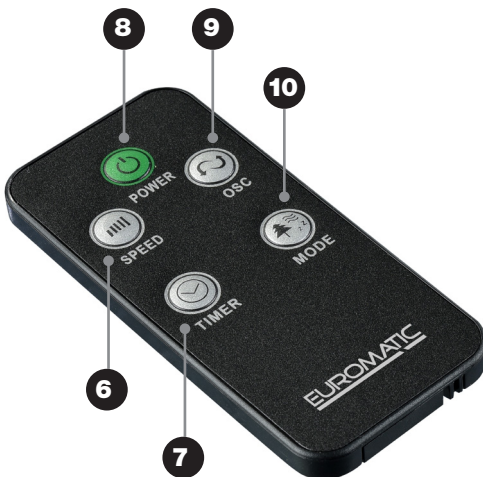

Buttons and indicators

- 6 SPEED button
- 7 TIMER button
- 8 POWER button
- 9 OSCILLATION button
- 10 MODE button
- 11 Fan speed indicators
- 12 Timer indicators
- 13 Oscillation indicator
- 14 Normal mode indicator
- 15 Natural mode indicators
- 16 Sleep mode indicator
- 17 Child mode indicator

Also supplied, but not shown:

- 4 screws for base installation
- Cable hook (packed with the instruction manual)

Getting Started

Unpacking

 
- **Unpack:** This product has been packaged to protect it against transportation damage. Unpack the appliance and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event that the packaging is to be disposed of, please recycle it where possible.
- **Safe packaging disposal:** Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- **Check power cord:** Unwind the cord to its full length. Inspect the power supply cord and plug, and all other parts of the appliance, for visual damage. Do not use the appliance if anything appears to be damaged or not working properly. In case of damage, contact our after sales support centre using the details at the bottom of the page.
- **Read instructions:** Make sure you have read and understood all instructions and warnings in this manual. Refer to the Product Overview, pages 5–6, to familiarise yourself with the product and identify all parts. Pay particular attention to the safety instructions on the previous pages.
- **Remote control:** The fan comes with a remote control, which is powered by a button cell (supplied inside). Pull the insulation film out from the back side of the remote control before using it. See page 14 for how to insert a new battery when the one supplied is depleted.
- **Base assembly:** The base of the tower fan is supplied unattached. Before using the fan, you must assemble the base. Assembly instructions are provided on the following page. Do not operate the fan without the base securely attached.
- **Cable hook assembly:** In the bag with the instruction manual you will also find a cable hook, which is supplied for you to attach to the back of the appliance for storage. See page 13 for assembly instructions.

Getting Started (Cont.)

Assembly

The base of the tower fan comes in two parts, which fit around the oscillation base. Both parts fit easily together; the back half is the one with cut-outs for the power supply cord.

- First attach the front half of the base, aligning the holes in base with the screw holes in the oscillation base, and leading the power cord through the centre hole.
- Then snap the back half of the base to the front half and secure with the four screws (supplied).
- Thread the power supply cord through the two cut-outs at the bottom of the base.

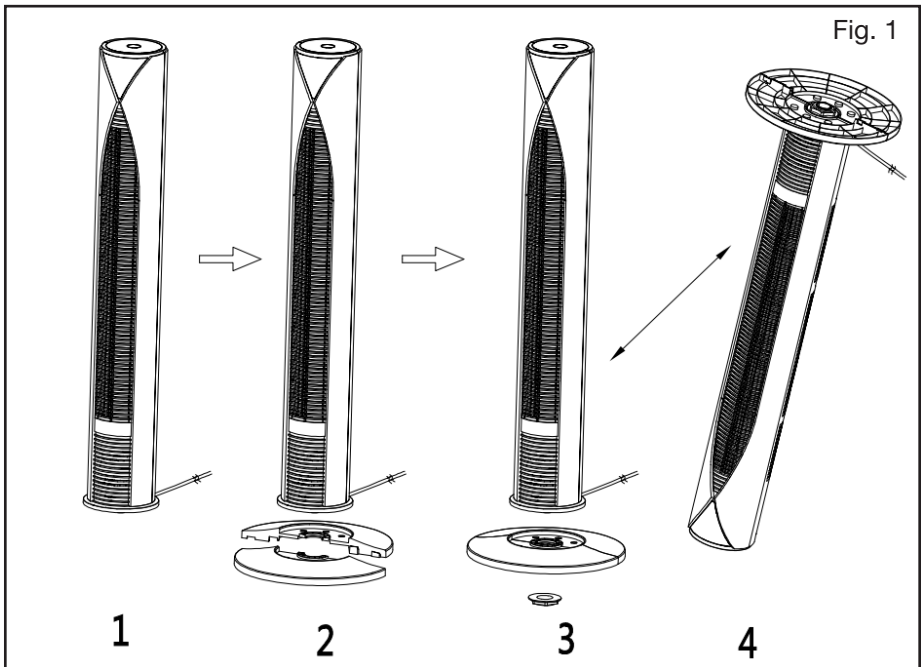

WARNING!

Never use the fan until it is properly assembled and affixed securely on the base. The fan must only be operated standing upright.

Instructions

 
Control panel or remote control operation

For your convenience, the buttons on the control panel operate the same functions as the remote control. The functions are described in detail below.

- When using the remote control, point it towards the LED display at the front of the fan and ensure that nothing is obstructing the path of the signal.
- Handle the remote control carefully; do not drop or throw it.

Display panel

When selecting a fan speed, operation mode, timer or oscillation, the respective indicator illuminates on the display panel (Fig. 2).

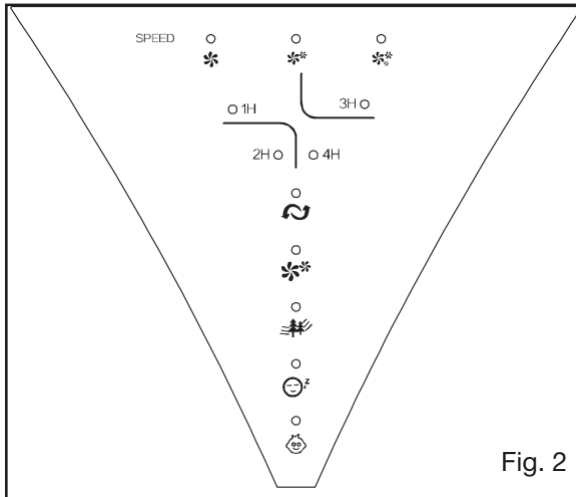





Setting up and powering on


- Place the fully assembled tower fan on a dry, level and stable surface, taking into consideration all relevant safety advice from the previous pages.
- Insert the plug into an appropriate electrical socket and switch on power at the outlet.
- Press the POWER (⏻) button to power the fan on or set it to standby.

Instructions (Cont.)





Fan speed

- Press the SPEED  button to adjust the fan speed to the desired level: Low , Medium  or High . The speed setting will be shown on the display screen.


Operation modes

Press the MODE  button to set the mode:

Normal , Natural , Sleep  or Child  mode.

- **Normal** : In this default mode the fan is operating at a constant speed.
- **Natural** : The fan is simulating a natural breeze mode by cycling through various speeds.
- **Sleep** : If set to high, the fan will reduce the fan speed every half hour until it runs at low speed, ideal for resting.
- **Child** : This is an automatic mode which is useful when settling down children to sleep. The fan will run for three hours with oscillation, first at high speed for 15 minutes to cool down the room, then at medium speed for 15 minutes and then at low speed until the end. You can stop oscillation manually.

Oscillation

- Press the OSC  button to start and stop oscillation. The oscillation symbol will be shown on the display screen.

Timer

The timer allows you to set the length of operation from 1 hour to 10 hours.

- Press the TIMER button repeatedly to set the off-time in one-hourly steps. Depending on the time period set (1 hour, 2 hours, 3 hours, 4 hours), one or more of the timer symbols will be illuminated on the display screen.

Frequently Asked Questions

If your fan fails to operate, or you experience any other problem with the appliance, check in the list of questions below for possible causes and solutions to common problems. Many problems can easily be solved without the need for a service call.

If the suggestions below do not help you solve the problem, please contact our after sales support centre for advice or to arrange a service. Before phoning for a service, please ensure that your fan is properly assembled and connected to your power supply.

- **What are the differences between the speed and modes?**

The SPEED button lets you set the fan blade speed to Low, Medium or High. The MODE button lets you determine the mode of operation: Normal (with constant wind speed), Natural (a combination of different wind speeds), Sleep (a softer breeze for night-time), or Child (a 3-hour cycle useful when settling down children to sleep).

- **The fan does not work although it is properly connected and the outlet is working.**

Check and ensure that the front and rear grilles are clean. Use a clean and dry brush (or vacuum cleaner brush attachment) to clean any dust or dirt off the openings, if necessary. Also ensure that nothing is blocking the air intake.

- **Does the appliance need to be disassembled for storage?**

No, it does not need to be disassembled, but doing so means you can easily store in its original box, where it will be protected from dust until the next season. If you have the space to store the appliance fully assembled, place a large plastic bag or piece of material over the top of the cleaned appliance for dust protection.

Other Useful Information

WARNING!

- Before cleaning, maintenance or moving the fan, switch off the fan and unplug it from the wall outlet.
- Do not immerse the fan in water or other liquids. Do not spray it with liquids. Do not allow water to drip on or into the fan motor housing.
- Never use petrol, solvents, harsh detergents, or abrasive or alkaline cleaners on the fan.

Cleaning and maintenance

- **Dusting:** Clean your fan periodically by lightly running a vacuum cleaner nozzle (soft brush) over the front and rear grilles to remove any dust or dirt that may have accumulated inside or on the unit. Alternatively, use a soft, dry cloth for dusting.
- **Stubborn stains:** Use a slightly damp, soapy cloth to remove stubborn stains from plastic parts, but be sure the cloth is not too wet and use caution around the air openings. Do not allow the motor or other electrical components to be exposed to water. After cleaning, dry the unit thoroughly with a soft cloth. Ensure the fan is completely dry before reuse.

 
Service/repair

- Apart from occasional battery replacement for the remote control (see page 14), the appliance requires no maintenance and contains no user-serviceable parts. Do not attempt to take it apart, repair or modify it.
- Do not operate the fan if its power cord or plug is damaged, or when it is working abnormally. In case of damage or malfunction, or if the cord is damaged, have the unit repaired by trained personnel only, or contact our after sales support centre for advice on repair or replacement.

Other Useful Information (Cont.)

Storage

- Before storing the fan in the off season, we recommend you attach the cable hook, which is packed with the instruction manual, to the back of the product, as pictured (Fig. 3). You can then hang the power plug on the hook when storing the fan.
- Store the clean and dry fan in a safe, dry location, protected from dust. We recommend using the original carton for storage of the disassembled product. To disassemble, follow the assembly instructions in reverse order. If you want to store the appliance fully assembled, place a large plastic bag or piece of material over the top of the cleaned appliance for dust protection.

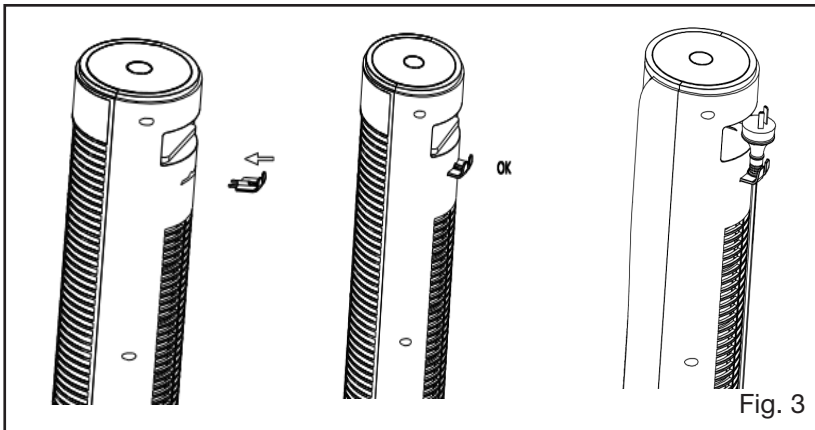

Other Useful Information (Cont.)

Battery replacement

The remote control is powered by a 3V lithium button cell. When the battery needs replacing, insert a new one of the same type and size, as follows:

- Remove the screw at the back of the device using a Phillips screwdriver.
- Push the locking tab to one side and pull out the battery holder at the back side of remote control, as illustrated below.
- Remove the old button cell from the device and insert a new one, ensuring to match the polarity, as illustrated on the back of the remote control.
- Push the battery holder back into the device and secure it with the screw.



DANGER if swallowed

WARNING!

The remote control contains a coin/button cell battery inside. Keep batteries out of reach of children. Swallowing may lead to serious injury or death in as little as 2 hours due to internal burns.

If swallowed, immediately call the 24-hour Poisons Information Centre on 13 11 26 (AU) or the 24-hour National Poisons Centre on 0800 764 766 (NZ). Dispose of used batteries immediately.

This product has been designed so that the coin/button cell battery is not accessible to young children, as the battery compartment cover is secured with a screw or mechanical fastener. Always ensure that the compartment is secured before use.

Other battery precautions

- Do not mix different types of batteries.
- Remove empty batteries and dispose of them responsibly.
- Do not dispose of used batteries in household waste. Dispose of them in accordance with statutory regulations.
- Never throw batteries into a fire or subject batteries to high temperatures.

Other Useful Information (Cont.)

Technical specifications

Power	220-240V~, 50-60Hz, 45W
Timer	10 hour timer
Fan speeds	3 (Low - Medium - High)
Mode settings	4 (Normal - Natural - Sleep - Child)
Remote control	Powered by a 3V lithium button cell (included)
Dimensions (mm)	1170mm (H) x 315mm (W) x 315mm (D)
Weight	approx. 3.65kg



CLASS II - DOUBLE INSULATED APPLIANCE

This symbol indicates that the appliance has been designed in such a way that it does not require a safety connection to electrical earth (ground).

Compliance

This appliance has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.80.

Responsible disposal

- At the end of its working life, make the appliance unserviceable by unplugging it from the power outlet and cutting the power cord.
- Do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances which can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on (AU) 1300 886 649 or (NZ) 0800 836 761 for advice.

Distributed by Tempo (Aust) Pty Ltd ABN 70 106 100 252

PO BOX 6056 Frenchs Forest, Australia NSW 2086

Customer Helpline:

(AU) 1300 886 649 (NZ) 0800 836 761

Email: info@tempo.org

For an electronic copy of this manual, please contact our after sales support centre.

IM Version No: V1.0

Issue: April 2020

After Sales Support

☎ (AU) 1300 886 649 (NZ) 0800 836 761 | ✉ info@tempo.org