

# EUROMATIC



## Air Circulator Pedestal Fan

### INSTRUCTION MANUAL

Model Number PF360RC-D

AFTER SALES SUPPORT

(AU) 1300 886 649 (NZ) 0800 836 761



# Contents

<b>Important Safety Instructions</b>	<b>3</b>
<b>Product Overview</b>	<b>6</b>
<b>Getting Started</b>	<b>7</b>
<b>Instructions</b>	<b>8</b>
<b>FAQs &amp; Troubleshooting Guide</b>	<b>11</b>
<b>Other Useful Information</b>	<b>12</b>

# Important Safety Instructions

## READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. Keep the manual in a safe place for future reference, along with any warranty information, your purchase receipt and the packaging carton. If you sell or transfer ownership of this product, please pass on these instructions to the new owner.

**Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:**

### Electrical safety and cord handling

- **Voltage:** Ensure your outlet voltage and circuit frequency correspond to the voltage stated on the rating label. If this is not the case, do not use the fan.
- **Water:** To protect against fire and electric shock, do not immerse the cord, plug or the fan in water or other liquid, or expose the electrical connections to water. Ensure your hands are dry before handling the plug or switch. Do not use the fan outdoors or on wet surfaces. Protect it from liquid spills.
- **Damage:** Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the manufacturer, its authorised service centres or appropriately qualified personnel in order to avoid any hazards.  
**WARNING!** Do not modify the length of the power cord. Do not pick up or operate the appliance if the power cord, plug or housing is damaged, or after it malfunctions or has been dropped or damaged in any manner. In case of damage, contact our after sales support centre.
- **Protect the power cord:**
  - Do not operate the fan with the cord coiled up; always fully unwind.
  - Do not twist or kink the cord or let it touch heated surfaces.
  - Do not put any stress on the cord where it connects to the product.
  - Never carry the fan by the cord.
  - Arrange the cord away from any traffic area so no one will trip over it.
  - Do not run the cord under carpeting or cover it with rugs or runners.
- **WARNING! No extension cord, no timer:** Do not use this fan with an extension cord, plug adaptor, external timer or separate speed control device.
- **Connection:** To insert the plug, grasp it firmly and guide it into outlet.
- **Disconnection:** Unplug the fan from the power outlet when it is not in use and before assembling, dismantling, cleaning, moving or servicing it. Grasp the plug and remove it from the outlet, do not pull the cord to disconnect.

# Important Safety Instructions (Cont.)

- **WARNING! Do not leave unattended during use!** Always switch it off and unplug when not in use, if left unattended, and before cleaning and storing.
- **Guard removal:** Ensure the fan is disconnected from the power supply before removing a guard (grille).
- **RCD:** Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.

## Usage conditions and restrictions

- **Domestic use only:** This fan is intended for indoor household use only. It is not suitable for commercial, industrial or outdoor use. Do not use it for anything other than its intended purpose, and only use it as described in this manual. Any other use may cause fire, electric shock or injury.
- **Attachments:** Only use this appliance with the accessory attachments supplied. The use of accessory attachments not supplied or recommended in this manual may cause injury or hazards.
- **Usage restriction:** This fan is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children:** This fan is not a toy. Supervise children to ensure they do not play with it. Close supervision is necessary when any appliance is used by or near children.
- **Keep the top clear:** Do not place anything on top of fan.
- **Proper assembly:** Do not operate the fan until fully assembled with all parts. Do not use the appliance without the protective grilles (rear and front guards). Do not attempt to force the grille in order to stop or start the fan.
- **CAUTION! Personal safety:** Avoid contact with moving parts. Never insert fingers, pencils or any other objects through the grilles when the fan is running. Keep hair and loose clothing well away from the fan when it is in use.
- **Strong airflow:** As the wind speed of this air circulator fan is relatively strong, do not direct the airflow directly towards children and older people for an extended period of time, which could adversely affect their health.

# Important Safety Instructions (Cont.)

**Free airflow:** Ensure nothing is blocking the airflow outlet and air intake grilles. Do not insert foreign objects into any opening as this may cause electric shock and/or a fire hazard.

 
- **WARNING! Do NOT use the fan in the following areas or circumstances:**
  - near an open flame, a hot burner, oven or other source of high heat
  - outdoors or in areas of high humidity without suitable ventilation (such as in a bathroom, laundry area) or near a sink, washer, pool or any source of water
  - in a window or near curtains
  - in areas where paint, petrol, etc. is stored and there is a risk of explosion or fire from flammable gases, or in areas where substances are being sprayed
  - in areas with airborne oil or metal particles, such as where metal is being processed.
- **Cleaning:** Disconnect the cord before cleaning the fan, then follow the cleaning instructions on pages 12–13.
- **Service:** Only have the fan repaired or serviced by authorised personnel.
- **Misuse:** We accept no liability for any damages or personal injury caused by misuse of the product and/or failure to follow these instructions.

# Product Overview


## Scope of delivery

### Pedestal fan (front/side view)

- 1 Front guard (safety grille)
- 2 Fan blade
- 3 Remote control and holder
- 4 Control panel (see page 8)
- 5 Rear guard (safety grille)
- 6 Handle
- 7 Stand post
- 8 Base
- 9 Power supply cord and plug

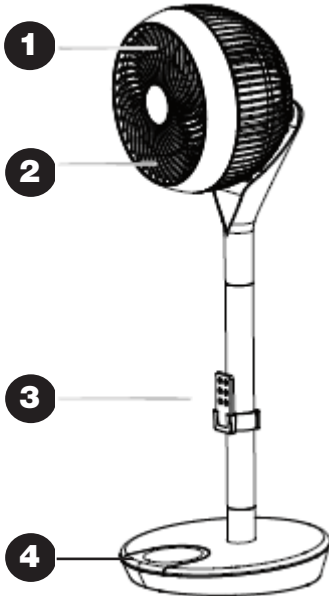

### Pedestal fan (rear/side view)

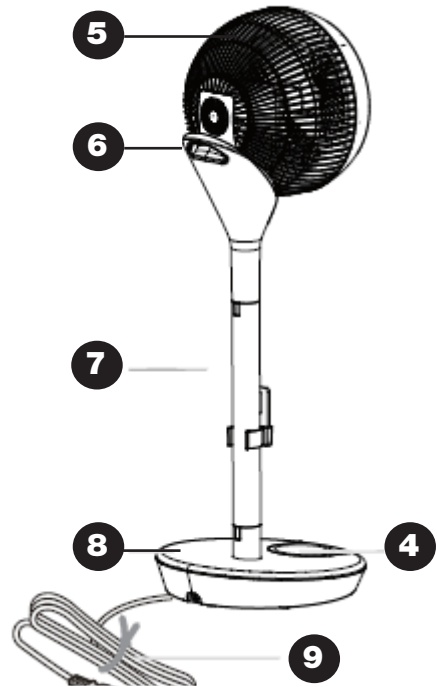 

**NOTE:** Due to continued product improvement, images and illustrations in this manual may vary slightly from the product purchased. All images in this manual are for reference purposes only. Parts are not necessarily pictured to scale.


# Getting Started
 
## Before first use

- **Unpacking:** This product has been packaged to protect it against transportation damage. Unpack the appliance and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event that it is to be disposed of, please recycle all packaging materials where possible.
- **Packaging:** Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- **Inspection:** Unwind the cord to its full length and inspect it for damage. Do not use the appliance if the fan or its cord has been damaged or is not working properly. In case of damage, please contact our after sales support centre for advice on examination, repair or return of the damaged product.
- **Documentation:** Make sure you have read and understood all instructions and warnings in this manual. Refer to the Product Overview (opposite) to familiarise yourself with the product and identify all parts. Pay particular attention to the safety instructions on the previous pages.
- **Remote control:** The remote control for the fan is powered by a CR2025 3V button cell. Before use, please grip the transparent insulation sheet by the tag and pull it out. When the battery needs replacing, insert a new one of the same type and size following the instructions on page 14.

When using the remote control, point the infrared transmitter at the front of the remote at the signal receiver on the fan body. The remote control has a range of up to 4 metres from the fan at an angle of up to 60 degrees. The remote control will not operate if its path is blocked. Make sure there are no any obstacles between the fan and the remote control. If the fan does not work when using the remote control from a close range, you need to replace the battery (see page 14).

- **Assembly:** Your new air circulator fan comes partially assembled in three parts: base, stand post and fan head. The parts are ready for assembly as a floor-standing pedestal fan or table fan, as pictured on the right.

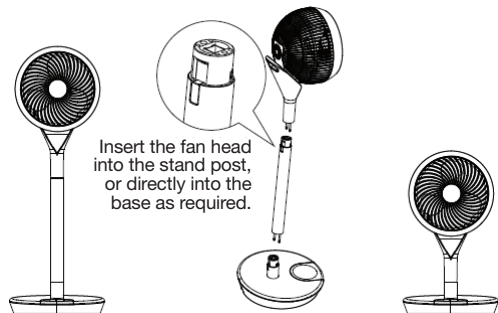

# Instructions

## Remote control and control panel operation



**POWER button:** Press to switch the fan on or to standby.



**[ + ] / [ - ] buttons:** *When using the remote control*, use the [ + ] and [ - ] buttons to select a wind speed from 1 to 12.



**WIND SPEED button:** *When using the control panel*, press the WIND SPEED button to select a wind speed from 1 to 12.



**3D oscillation:** Press to activate (or deactivate) 360° oscillation (see page 9 for an illustration).



**SWING (right/left) button:** Press to activate (or deactivate) right/left oscillation (see page 9 for an illustration).



**MODE button:** Press to select an operation mode from the following options:

**Natural:** fan speed changes to simulate a natural breeze mode

**Normal:** constant fan speed

**Sleep:** gradually reduces the fan speed in half hour intervals

**Eco:** the fan speed changes automatically depending on the ambient room temperature, as shown below:

Temp.	<22°C	22–25°C	25–28°C	28–32°C	>32°C
Speed	1	3	6	9	12



**TIMER button:** Press to select the desired time from the following options:

 
**Auto-off:** 0.5h --> 1h --> 1.5h ... --> 8h.

**Auto-on:** 0.5h --> 1h --> 1.5h ... --> 4h.



# Instructions (Cont.)

3D (360°) and left/right oscillation

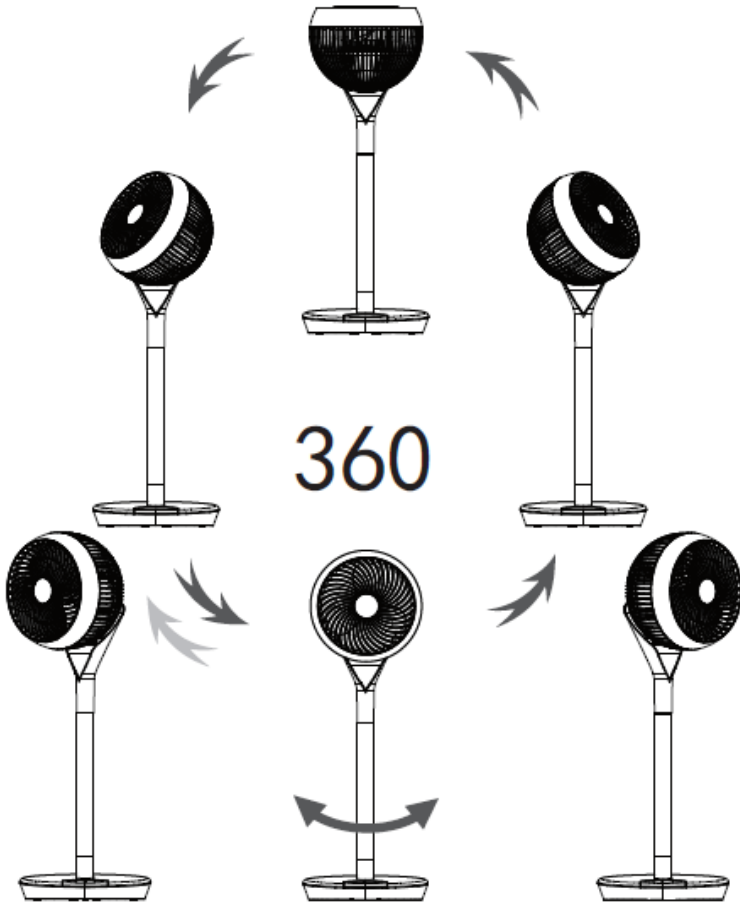

## WARNING!

Never attempt to touch a fan blade, or insert an object through the safety grilles during operation – risk of injury!

 
After Sales Support

☎ (AU) 1300 886 649 (NZ) 0800 836 761 | ✉ [info@tempo.org](mailto:info@tempo.org)


# Instructions (Cont.)

Place the fan on a level, even floor surface (if assembled as a pedestal fan) or a level tabletop (if assembled as a table fan). Operation steps are explained on page 8.


When using the air circulator fan, keep the following points in mind:

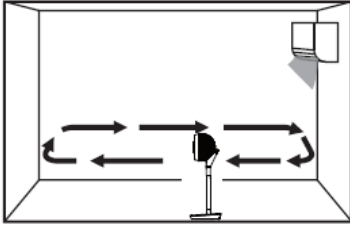

 
**When using air conditioning equipment**, the fan helps distribute the cool air through the whole room.

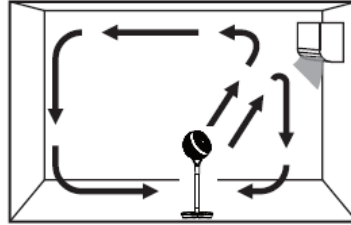

 
**When using an air conditioner in heating mode**, the fan helps draw the warm air to the floor level.

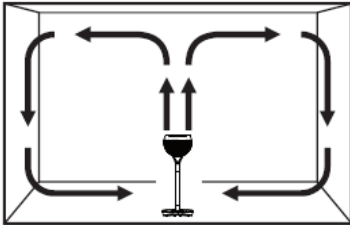

 
**Used on its own**, the fan helps distribute the ambient air through the whole room.

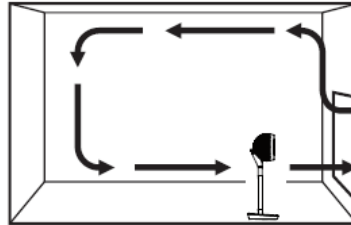

 **When used with an open window**, the fan helps exchange the indoor air with fresh air from outside.

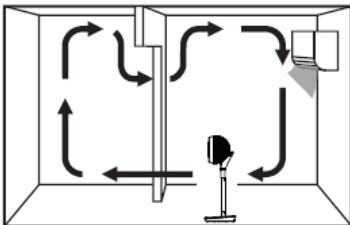

 **When used with an open door**, the fan helps distribute the air conditioned air to the next room.

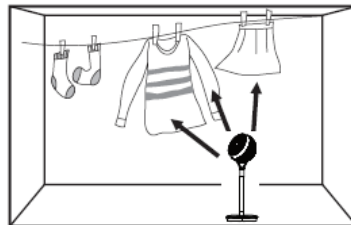

**When used to help dry clothes**, the fan helps accelerate the drying process.

# FAQs & Troubleshooting Guide

## CAUTION!

Always switch off and disconnect the appliance from the power supply before attempting any maintenance or cleaning the fan.

If your fan fails to operate, or you experience any other problem with the appliance, check in the table below for solutions to common problems. If none of the advice offered can help you solve the problem, please contact our after sales support centre for advice or to arrange a service.

Fault	Possible Cause	Remedy
The fan does not work.	Faulty fuse or wall socket.	Select another wall socket.
	Improper connection.	Check and ensure you have properly plugged the fan into your power supply.
There is an abnormal noise during operation.	The fan is positioned on an uneven surface.	Place the fan on a flat, even surface for proper operation.
	The front cover is not fixed.	Reinstall and secure the front cover.
Low wind speed.	Dust accumulation.	Check and ensure the fan is clean for proper operation.
Noisy when 3D oscillation is selected.	This is the unique sound of the motor at the start of the oscillating function.	This is normal. No corrective action is required.

## Long term usage

After the appliance has been used for many years, the risk of smoke and fire increases due to high temperatures and dust accumulation on internal parts. To prevent this from happening, switch off the appliance immediately, disconnect the power supply and contact our after sales support centre if any of the below situations arise:

- The fan blade does not rotate when the speed is selected
- Abnormal sounds from the fan blade rotation
- Irregular frequencies of fan blade rotation
- Breakage, bending and aging of the power supply cord
- The fan blade suddenly turns or stops when touching the power cord
- A smell of burning.

# Other Useful Information

## WARNING!

 
- Before cleaning, maintenance or moving the fan, and before removing a front or rear grille, switch off the fan and unplug it from the wall outlet.
- If the motor is hot, wait until it has cooled completely before cleaning.
- Do not immerse the fan in water or other liquids. Do not spray it with liquids. Do not allow water to drip on or into the fan motor housing.
- Never use petrol, solvents, harsh detergents, or abrasive or alkaline cleaners on the fan.

## Cleaning and maintenance

- **Dusting:** Clean your fan periodically by lightly running a vacuum cleaner nozzle (soft brush) over the front and rear grilles to remove dust that may have accumulated inside or on the unit.

Alternatively, use a soft, dry, lint-free cloth or feather duster for dusting. You may also use a flexible dust wand, pipe cleaner or compressed air to gently remove dust from between the guards.

- **Stubborn stains:** Use a slightly damp, soapy cloth for stubborn stains but be sure the cloth is not too wet. Use caution around the motor housing and control panel areas. Do not allow the motor or other electrical components to be exposed to water. Dry thoroughly.

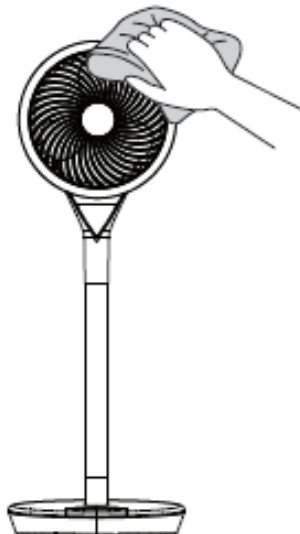


# Other Useful Information (Cont.)

## Blade cleaning

Unscrew the set screw at the front cover (guard). Remove the front cover, turning it in anticlockwise direction.

Use a vacuum cleaner crevice nozzle to remove dust. Use a soft cloth to wipe the blade and areas you cannot reach with the vacuum cleaner.

 To reinstall the front cover, make sure the lug of the front cover (guard) locks the rear cover, then screw the two pieces together.

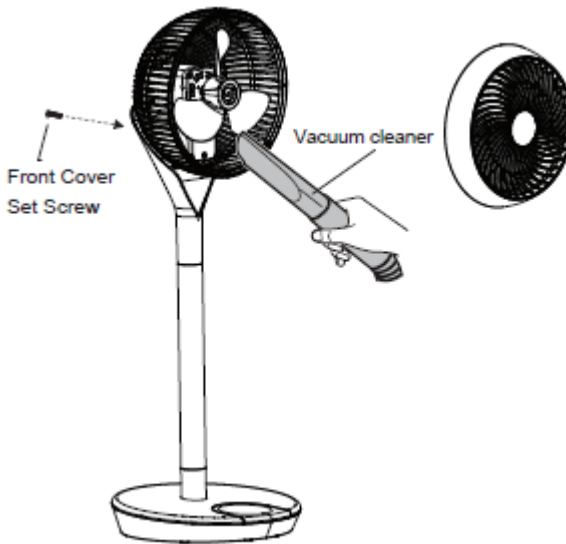

## Storage

Store the fan in the off season in a safe, dry location, protected from dust. We recommend using the original carton for storage. Alternatively, place a plastic bag or piece of material over the top of the cleaned appliance for dust protection.

## Service and repair

 
- Except battery replacement (see page 14), the appliance requires no further maintenance and contains no user-serviceable parts. Do not attempt to take the motor housing apart, or to repair or modify the appliance.
- Do not operate the fan if its power cord or plug is damaged, or when it is working abnormally. In case of damage or malfunction, or if the cord is damaged, have the unit repaired by appropriately qualified personnel only, or contact the after sales support centre for advice.

# Other Useful Information (Cont.)

## Battery replacement

The remote control is powered by a CR2025 3V button cell. When the battery needs replacing, insert a new one of the same type and size following the instructions below:

- Unscrew the screw that secures the battery compartment.
- Push the locking tab to one side and pull out the battery holder at the back side of remote control, as illustrated.
- Remove the old button cell from the device and insert a new one, ensuring to match the polarity, as illustrated on the back of the remote control. Then push the battery holder back into the device.
- Reinstall the screw and tighten it to secure the battery compartment.

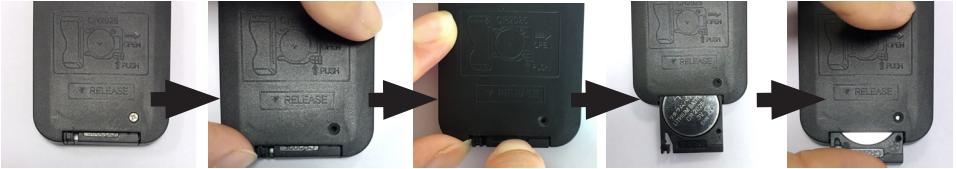

**DANGER if swallowed**

### **WARNING!**

The remote control contains a coin/button cell battery inside. Keep batteries out of reach of children. Swallowing may lead to serious injury or death in as little as 2 hours due to internal burns.

 
**If swallowed, immediately call the 24-hour Poisons Information Centre on 13 11 26 (AU) or the 24-hour National Poisons Centre on 0800 764 766 (NZ). Dispose of used batteries immediately.**

This product has been designed so that the coin/button cell battery is not accessible to young children, as the battery compartment cover is secured with a screw or mechanical fastener. Always ensure that the compartment is secured before use.

# Other Useful Information (Cont.)

## Technical specifications

Power	30W, 220-240V ~, 50–60Hz
Fan speeds	12
Operation modes	4 (Normal, Natural, Sleep, Eco)
Dimensions (mm)	approx. 890(H) x 320(L) x 320(W)
Weight	approx. 2.8kg



### CLASS II - DOUBLE INSULATED APPLIANCE

This symbol indicates that the appliance has been designed in such a way that it does not require a safety connection to electrical earth (ground).

## Compliance

This appliance has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.80.



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.

## Responsible disposal

- At the end of its working life, make the appliance unserviceable by unplugging it from the power outlet and cutting the power cord.
- Do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances which can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

## **Warranty returns**

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

## **Product does not work?**

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on (AU) 1300 886 649 or (NZ) 0800 836 761 for advice.

Distributed by Tempo (Aust) Pty Ltd ABN 70 106 100 252

PO BOX 6056 Frenchs Forest, Australia NSW 2086

Customer Helpline:

(AU) 1300 886 649 (NZ) 0800 836 761

Email: [info@tempo.org](mailto:info@tempo.org)

For an electronic copy of this manual, please contact our after sales support centre.