

# click



81cm Tower Fan with Timer

## INSTRUCTION MANUAL

MODEL: TF-A02

AFTER SALES SUPPORT

☎ (AU) 1300 886 649 (NZ) 0800 836 761 | ✉ [info@tempo.org](mailto:info@tempo.org)



# Contents

Important Safety Instructions	3
Product Overview	5
Getting Started	6
Instructions	8
Other Useful Information	9

# Important Safety Instructions

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. Keep the manual in a safe place for future reference, along with any warranty information, your purchase receipt and the original carton.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

- Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating label.
- To protect against fire and electric shock, do not immerse the cord, plug or fan in water or other liquid, or expose the electrical connections to water. Ensure your hands are dry before handling the plug or switching on the fan. Do not use the fan outdoors or on wet surfaces. Protect it from liquid spills.
- Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the manufacturer, its authorised service centres or appropriately qualified personnel in order to avoid any hazards.
- **WARNING!** Do not pick up or operate the fan if the supply cord, plug or housing is damaged, or after it malfunctions or has been dropped or damaged in any manner. If damaged, contact our after sales support centre for advice.
- Protect the power cord:
  - Do not operate the fan with the cord coiled up; always fully unwind.
  - Do not twist or kink the cord or let it touch heated surfaces.
  - Do not put any stress on the cord where it connects to the product.
  - Never carry the fan by the cord.
  - Arrange the cord away from any traffic area so no one will trip over it.
  - Do not run the cord under carpeting or cover it with rugs or runners.
- **WARNING!** No extension cord, no timer: Do not use this fan with an extension cord, plug adaptor, external timer or separate speed control device.
- To insert the plug, grasp it firmly and guide it into outlet.
- Do not use the main power switch and the On/Off switch as the sole means for disconnecting power. Always unplug the fan from the power outlet when it is not in use and before cleaning, servicing, moving or storing the appliance. Grip the plug and remove it from the outlet, do not pull the cord when disconnecting at the mains.
- Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.
- The use of accessory attachments not recommended in this manual may cause injury or hazards.

# Important Safety Instructions (Cont.)

 
- This appliance is intended for indoor household use only. It is not suitable for commercial, industrial or outdoor use. Do not use it for anything other than its intended purpose, and only use it as described in this manual. Any other use may cause fire, electric shock or injury.
- Do not use this fan to dry clothes.
- We accept no liability for any damages or personal injury caused by misuse of the product and/or failure to follow these instructions.
- This fan is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This fan is not a toy. Supervise children to ensure they do not play with it. Close supervision is necessary when any appliance is used by or near children.
- **WARNING!** Do not leave unattended during use. Switch it off and unplug it when not in use, if left unattended and before cleaning and storing.
- Do not move the fan while it is in use. Do not shake it.
- Position the assembled fan on a dry, flat, stable surface, keeping a sufficient distance around the fan and any objects that could get damaged or caught in the rotating fan blades. Do not place it on a desk as this could affect the stability of the product.
- Do not cover the fan or place anything on top of fan.
- Do not operate the fan until fully assembled.
- **WARNING! DO NOT** use the fan in the following areas:
  - near an open flame, a hot burner, oven or other source of high heat
  - on a soft surface (such as carpet) or where it may tip over during use
  - outdoors or in areas of high humidity without suitable ventilation (such as in a bathroom, laundry area or near a pool)
  - near curtains or in tight corners, to enjoy maximum airflow
  - in areas where paint, petrol, etc. is stored and there is a risk of explosion or fire from flammable gases, or in areas where substances are being sprayed.
- **CAUTION!** Avoid contact with moving parts. Never insert fingers, pencils or any other objects through the grilles/housing when the fan is running. Keep hair and loose clothing well away from the fan when it is in use.
- Ensure nothing is blocking the air outlet and intake. Do not insert objects into any opening as this may cause electric shock and/or a fire hazard.
- Always wait until the fan has stopped completely and unplug it from the power supply before cleaning the fan. Wipe the fan with a damp cloth and allow to dry thoroughly. Do not clean it with abrasive chemicals or materials such as scourers, as they may damage the fan. Do not spray it with insecticide or chemical solvents.
- **WARNING!** If a strong odour is emitted from the fan, turn it off and unplug it from the mains power supply.

# Product Overview


## Scope of delivery

- 1 Control panel (see page 8)
- 2 Air intake grille (at the back)
- 3 Stand base (to be assembled)
- 4 Air outlet grille
- 5 Integrated carry handle (at the back, not visible here)
- 6 Oscillation button
- 7 Timer control dial
- 8 Fan speed buttons

## Tower fan (assembled)

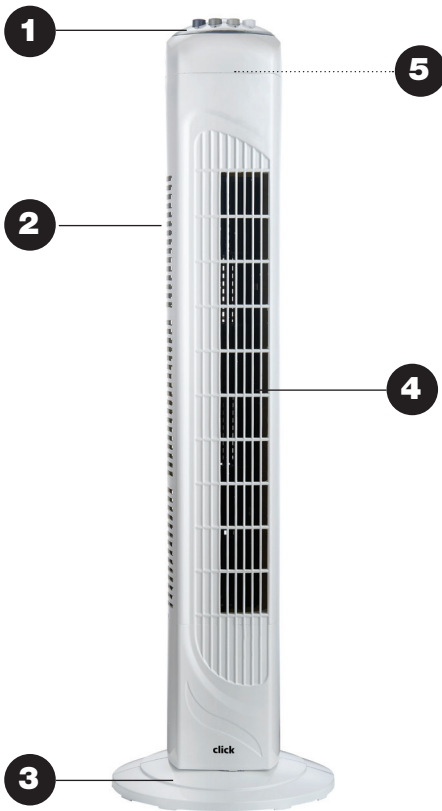

## Control panel

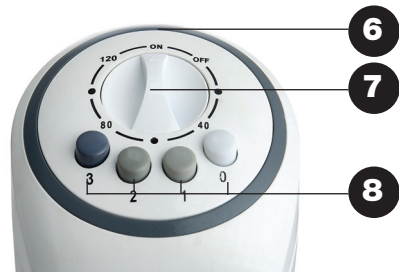 

Also supplied, but not shown:  
4 screws for stand assembly  
Instruction manual  
Warranty certificate

**NOTE:** Due to continued product improvement, images and illustrations in this manual may vary slightly from the product purchased. All images in this manual are for reference purposes only. Parts are not necessarily pictured to scale.

# Getting Started

## Unpacking

 
- This product has been packaged to protect it against transportation damage. Unpack the appliance and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use.
- Watch out for the four small screws, which you will need for assembling the base.
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely. In the event that the carton is to be disposed of, please recycle it where possible.
- Unwind the cord to its full length. Inspect the power supply cord and plug, and all other parts of the appliance, for visual damage. Do not use the appliance if anything appears to be damaged or not working properly. In case of damage, contact our after sales support centre using the details at the bottom of the page.
- Make sure you have read and understood all instructions and warnings in this manual. Refer to the Product Overview, page 5, to familiarise yourself with the product and identify all parts. Pay particular attention to the safety instructions on the previous pages.

# Getting Started (Cont.)

## Assembly

The stand of this tower fan must be attached to the fan base before use. Please follow the assembly instructions below. Ensure all parts are properly assembled before using the appliance.

- STEP 1: Place the product flat on the floor or desktop. On the base of the tower fan remove the base locking collar by unscrewing it in an anticlockwise direction (Fig. 1).
- STEP 2: Take the two base shells and run the mains plug and power supply cord of the tower fan through the openings in each (Fig. 2).
- STEP 3: Fit together the two base shells to form the base and then insert the four base screws, tightening them in a clockwise direction to secure.
- STEP 4: Attach the base onto the bottom end of the tower fan so that the locking tabs align with the corresponding slots. Twist the base locking collar in a clockwise direction to secure it into position. Insert the power cord into the cable slot.
- After installation, place the tower fan in vertical position for operation.

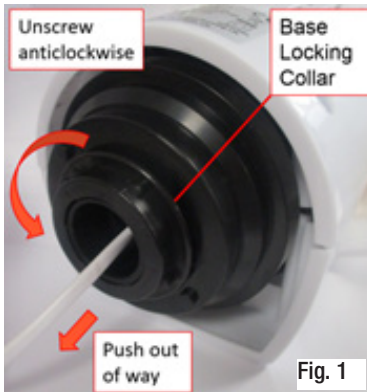

### WARNING!

Never use the fan until it is properly assembled and affixed securely on the stand.  
The fan must only be operated standing upright.

# Instructions

## Using the tower fan

This tower fan is equipped with three wind speeds, an oscillation function, a 2-hour timer and an easy to use control panel on top of the unit.

- **STEP 1:** Before connecting to the power supply, please check whether the voltage displayed on the product is consistent with your power supply voltage. Then plug in the power supply.
- **STEP 2:** To turn on the tower fan, select the desired cooling speed by pressing the fan speed buttons. Speed setting [ 1 ] gives you the lowest wind speed, setting [ 3 ] the strongest.
- **STEP 3:** To use the tower fan for a set period of time, turn the timer control dial in a clockwise direction to select the desired time.

Once set, the timer control will run its course but can be interrupted and stopped by turning the timer control dial in an anticlockwise direction to the [ OFF ] position.

- **STEP 4:** Activate the swing function by pressing the oscillation (OSC) switch at the back of the unit to the ON [ 1 ] position. The fan will now oscillate 60° from one side to the other. Press the switch to the OFF [ 0 ] position to stop the swing.
- **STEP 5:** Turn off the fan by pressing the [ 0 ] button and turning the timer control dial in an anticlockwise direction to the [ OFF ] position. Unplug the tower fan when it is not in use.

Fig. 3





# Other Useful Information

## WARNING!

- Always wait until the fan has stopped completely, then switch off the fan and unplug it from the wall outlet before cleaning, maintenance or moving the fan.
- Do not immerse the fan in water or other liquid. Do not spray it with liquids. Do not allow water to drip on or into the fan motor housing.
- Never use petrol, solvents, harsh detergents, or abrasive or alkaline cleaners on the fan.

## Cleaning and maintenance

- Clean your fan periodically by lightly running the soft brush nozzle of a vacuum cleaner over the front and rear grilles to remove any dust or dirt. Alternatively, use a soft, dry, lint-free cloth for dusting.
- Use a slightly damp, soapy cloth to remove stubborn stains from plastic parts, but be sure the cloth is not too wet and use caution around the air openings. After cleaning, dry the unit thoroughly with a soft cloth. Ensure the fan is completely dry before reuse.
- **WARNING:** Do not allow the motor or other electrical components to be exposed to water.
- **WARNING:** Do not attempt to disassemble the housing or take off a front or rear grille for cleaning.

## Storage

- In the off season, store the clean and dry fan in a safe, dry location, protected from dust. We recommend using the original carton for storage of the disassembled product.
- To disassemble, follow the stand base assembly instructions in reverse order. Alternatively, place a large plastic bag or piece of material over the top of the cleaned appliance for dust protection during storage.

## Service/repair

- The appliance requires no maintenance and contains no user serviceable parts.
- Do not attempt to take the fan apart, repair or modify it. Do not open the enclosure, or operate the fan if its power cord or plug is damaged, or when it is working abnormally.
- In case of damage or malfunction, or if the cord is damaged, have the unit repaired by qualified personnel only, or contact our after sales support centre for advice on repair or replacement.

# Other Useful Information (Cont.)

## Technical specifications

Power	220–240V~ 50Hz 45W
Fan speeds	3
Timer	2 hour timer
Dimensions (approx.)	(H)820 x (L)160 x (W)139
Weight (approx.)	2kg

## Responsible disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could be hazardous to the environment and human health. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Contact your local authority for your nearest recycling centre.

## Compliance

This appliance has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.80.



### CLASS II - DOUBLE INSULATED APPLIANCE

This symbol indicates that the appliance has been designed in such a way that it does not require a safety connection to electrical earth (ground).



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.

This page has been left blank intentionally.

## Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

## Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on (AU) 1300 886 649 or (NZ) 0800 836 761 for advice.

Distributed by Tempo (Aust) Pty Ltd ABN 70 106 100 252

PO BOX 6056 Frenchs Forest, Australia NSW 2086

Customer Helpline:

(AU) 1300 886 649 (NZ) 0800 836 761


Email: [info@tempo.org](mailto:info@tempo.org)

For an electronic copy of this manual, please contact our after sales support centre.

IM Version No: V1.0

Issue: April 2020

AFTER SALES SUPPORT

 (AU) 1300 886 649 (NZ) 0800 836 761 |  [info@tempo.org](mailto:info@tempo.org)