

Serene S2068

Serene Bathroom Fan Heater

Operating Instructions



Introduction

Designed for easy installation, your Serene S2066 - S2068 Metal Bathroom Fan Heater includes a clip-on wall mount bracket for faster and easier installation. This model S2068 bathroom fan heater has been designed to cover the footprint of previously available SERENE and SKOPE models

Safety Information

- When using any electrical appliance, safety precautions should always be observed. Read these instructions carefully and retain for future reference. For service, contact your nearest authorised service agent.
- When used by, or near young children or infirm persons, close supervision is necessary. Young children should be supervised to ensure that they do not play with the appliance.
- Do NOT use this appliance other than for its intended use.
- Use this appliance with the voltage specified on the rating label.
- Be very careful not to touch hot surfaces or moving parts.
- Do NOT cover the grilles or place any object or material up against the unit as this may block the entry or exhaust of airflow.
- Do NOT probe any opening to remove fluff. To ensure trouble-free performance, it is recommended that the unit be isolated from the power supply and a vacuum cleaner used to remove dust and fluff from the inlet and outlet grilles on a regular basis.
- Regulations require that electrical work be carried out by authorised persons. For your own safety and that of others, ensure this is done.
- Do NOT allow the supply cord to come into contact with heated surfaces during operation.
- If the supply cord becomes damaged, it must be replaced by a qualified person in order to avoid a hazard.

Installation

This appliance MUST be installed in accordance with relevant wiring rules and regulations which cover installation of appliances and accessories in damp situations, such as bathrooms, showers, laundries and other areas with fixed water containers (in Australia and New Zealand - AS/NZS 3000:2000 Wiring Rules).

Distances

The heater must be mounted a minimum distance of:

- 1800mm from floor level
- 200mm below the ceiling
- 250mm from adjacent walls



Important: The heater must NOT be located immediately below a socket outlet or within reach of a bath or shower.

To attach the heater to the wall:

1. Remove the wall mounting base from the heater by using a screwdriver (large flat blade) to release both of the side clips from inside the base.
2. Secure the mounting base to the wall using the four fixing screw holes provided. The base supplied with the heater must be used when attaching the heater to the wall.
3. Put the heater onto the mounting base and snap it into position.
4. Connect the flexible cord to the mains power supply. A suitable disconnect device is required to be incorporated in the fixed supply wiring.

Operation

The operation of the heater is controlled by use of the pull-cord switch. Pull the pull-cord to switch the heater on. Pull the pull-cord again to switch the heater off. The blue LED indicator lights when the heater is operating.

The heat output is regulated by an internal step-down thermostat, which will reduce the output from 2200-2400 Watts to 1100-1200 Watts, when a comfortable room temperature is reached.

Care

The heater requires regular cleaning to ensure trouble free operation.

- Isolate the heater from the mains power supply.
- Use a damp cloth to clean the exterior of the heater. Do not use any abrasive cleaners.
- The S2068 is fitted with our “Airslip” metal fan blade that alleviates any dust build up inside the heater.
- Use a vacuum cleaner to remove dust and fluff visible on the heater inlet and outlet grilles.
- Ensure the heater is dry before turning heater back on.

Specifications: Serene S2066 - S2068

Electrical	
Supply	230-240 volts A.C. 50 Hz
Wattage	2200-2400W, thermostatically reduced to 1100-1200W
Wiring	Permanent connection. Double insulated, no earth required.
Ingress Protection Rating	IP23

Dimensions

Height	210mm
Width	300mm
Depth	110mm (includes mounting base)
Weight	2.35kg

Serene Industries Limited reserves the right to alter specifications without notice.

Contact:

HONG KONG

Head Office - Serene Industries Limited

t: +852 2325 3209

f: +852 2325 3166

e: info@serene-ind.com

w: www.serene-ind.com

Suite 1010, 10F, Block A, Alexander Industrial Building, 62 King Lam Street,
Cheung Sha Wan, Kowloon Hong Kong SAR

NEW ZEALAND

t: (+) 64 (3) 344 5550

f: 0800 437 264- Freefax

e: nzenquiry@sereneind.com

w: www.serene-ind.com

PO BOX 33501, Barrington, Christchurch 8024

AUSTRALIA

e: auenquiry@serene-ind.com

w: www.serene-ind.com

UNITED KINGDOM

t: +44 (0)1624 497794

e: ukenquiry@serene-ind.com

w: www.serene-ind.com

Rowhead House, Far Common Road
Mirfield, West Yorkshire WF140DQ