

Serene S2088 All Metal Wall Mounted & Bathroom Fan Heater



Operating Instructions

Introduction

Designed for easy installation, your Serene S2088 Wall & Bathroom Fan Heater includes a metal wall-mounting hinged bracket for faster and easier installation. This all new model wall and bathroom fan heater with 'Airslip' technology has been designed to cover the footprint of previously available SKOPE models.

Safety Information

- When using any electrical appliance, safety precautions should always be observed. Read these instructions carefully, and retain for future reference. For service, contact your nearest authorised service agent.
- Under no circumstances should an unauthorized person open the heater to adjust the thermostat.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance. Do NOT use this appliance other than for its intended use.
- Use this appliance only with the voltage specified on the rating label.
- Be very careful not to touch hot surfaces or moving parts.
- Do NOT cover the grilles or place any object or material up against the unit as this may block the entry or exhaust of airflow.
- Do NOT probe any opening to remove fluff. To ensure trouble-free performance, it is recommended that the unit be isolated from the power supply and a vacuum cleaner used to remove dust and fluff from the inlet and outlet grilles on a regular basis.
- Installation must be performed by a licensed electrician. Regulations require that electrical work be carried out only by properly qualified person. For your own safety and that of others, ensure this is done.
- Do NOT allow the supply cord to come into contact with heated surfaces during operation.
- If the supply cord becomes damaged, it must be replaced by a qualified person in order to avoid a hazard.

Installation

The installation must be performed by a licensed electrician


This appliance MUST be installed in accordance with relevant wiring rules and regulations which cover installation of appliances and accessories in damp situations, such as bathrooms, showers, laundries and other areas, fixed water containers (in Australia and New Zealand - AS/NZS 3000:2000 Wiring Rules

A suitable disconnection device (acting in all supplies) MUST be incorporated in the supply wiring

Distances

The heater must be mounted a minimum distance of:

- 1800mm from floor level
- 200mm below the ceiling
- 250mm from adjacent walls
- 500mm between the heater and any objects heated below it.

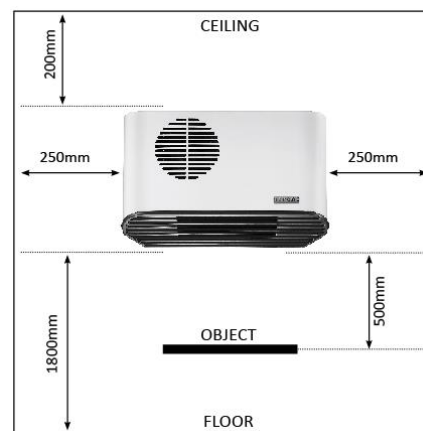

Important

The heater must NOT be located immediately below a socket outlet.

The heater is to be installed so that switches and other controls cannot be touched by a person in the bath or shower.

Safety Cutout

Your Serene S2088 Wall & Bathroom Fan Heater is fitted with an auto-reset thermal cutout and a fusible link. Either of these devices will automatically switch off the elements, should the unit reach an abnormal temperature. This is very unlikely to happen with the introduction of our 'Airslip' technology that largely prevents dust build up in the heater other than in very abnormal conditions.

However, should this occur:

- Switch Off / Disconnect heater from power supply.
- Check for blockage of the air inlet and outlet.
- Use a vacuum cleaner to clean if necessary.
- If the heater still fails to operate, contact the place of purchase.

Operation

Air is drawn through the inlet grill in the cover of the heater by the fan, blown over heating elements, and then blown out through the front grille into the room. The heater is controlled by the pull-cord switch.

The heat output is regulated by an automatic, pre-set adjustable step-down thermostat which will reduce the output from 2000-2400 Watts to 1000-1200 Watts when a comfortable room temperature (of between approximately 26 to 36 degrees C, which can be selected on the thermostat adjustment knob during installation) is reached.

Care

The heater is best wiped down from time to time with a damp cloth. Do not use any abrasive cleaners.

Specifications: Serene S2088

Electrical	
Supply	220-240 volts A.C. 50 Hz
Wattage	2000-2400W, thermostatically reduced to 1000-1200W
Wiring	Hard wired
Ingress Protection Rating	IP21

Dimensions	
Height	214mm
Width	350mm
Depth	108mm (includes mounting base)
Weight	2.95kg

Serene Limited reserves the right to alter specifications without notice.

Contact:

HONG KONG

Head Office - Serene Industries Limited

t: +852 2325 3209

f: +852 2325 3166

e: info@serene-ind.com

w: www.serene-ind.com

Suite 1010, 10F, Block A, Alexander Industrial Building, 62 King Lam Street,
Cheung Sha Wan, Kowloon Hong Kong SAR

NEW ZEALAND

t: (+) 64 (3) 344 5550

f: 0800 437 264- Freefax

e: nzenquiry@sereneind.com

w: www.serene-ind.com

PO BOX 33501, Barrington, Christchurch 8024

AUSTRALIA

t: (+) 64 (3) 344 5550

e: auenquiry@serene-ind.com

w: www.serene-ind.com

UNITED KINGDOM

t: +44 (0)1624 497794

e: ukenquiry@serene-ind.com

w: www.serene-ind.com

Rowhead House, Far Common Road
Mirfield, West Yorkshire WF140DQ