
# **CLEVER** CLOSET Solving your storage problems, one basket at a time!



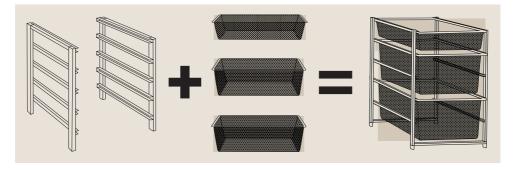







### STEP 1



- Choose frame size (3 run, 5 run or 7 run frame):
  3 Runner Frame (435mm wide x 545mm deep x 330mm high)
  5 Runner Frame (435mm wide x 545mm deep x 530mm high)
  7 Runner Frame (435mm wide x 545mm deep x 730mm high)
- To build higher runners (7+) use
  T-connectors to join runners on top and to build a tower unit



## STEP 2

- Feet options use an L-Connector on the bottom of the frame if you want the frame flush to the ground
- Use T-Connector feet to elevate the unit off the ground
- Use Castors to move unit around (Please Note: once adjusted feet or castors are installed, they can't be changed)
- Plastic Feet cover available to fit over T-Connector for a cleaner look

#### **STEP 3**

- Top options:
  - Option 1 Use an L-Connector to join frames together for a single stand alone unit
  - Option 2 Use T-Connector to join 2 or more frames together to build a tower unit
  - Option 3 Use Joiners to join 2 or more units next to each other

# STEP 4

- Choose basket type (mesh or wire in white or satin grey)
- Choose basket size:

85mm high – suitable for placement on one runner 185mm high – suitable for Timber Top


placement on two runners 285mm high – suitable for placement on three runners • Timber top available





# STEP 5

- Use a Tower Shelf to join 2 units and to build a tower unit (as per cover image)
- Tower Bracket can only be attached to the top or bottom of a frame, not in the centre.
- To use a Hanging Rod attach the J Hooks to the Tower Shelf, place your Hanging Rod on it.

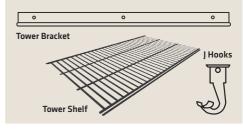

For more information please visit www.handy-storage.com.au



