






- For drywall and wood
- Strong & easy installation
- No pre-drilling required
- All you need is a screwdriver

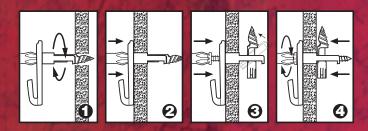

For more information: call COBRA at 1-800-824-7717

The Power of Innovation